


(Note: Head sizes may differ from what is shown due to differences between metric standards)

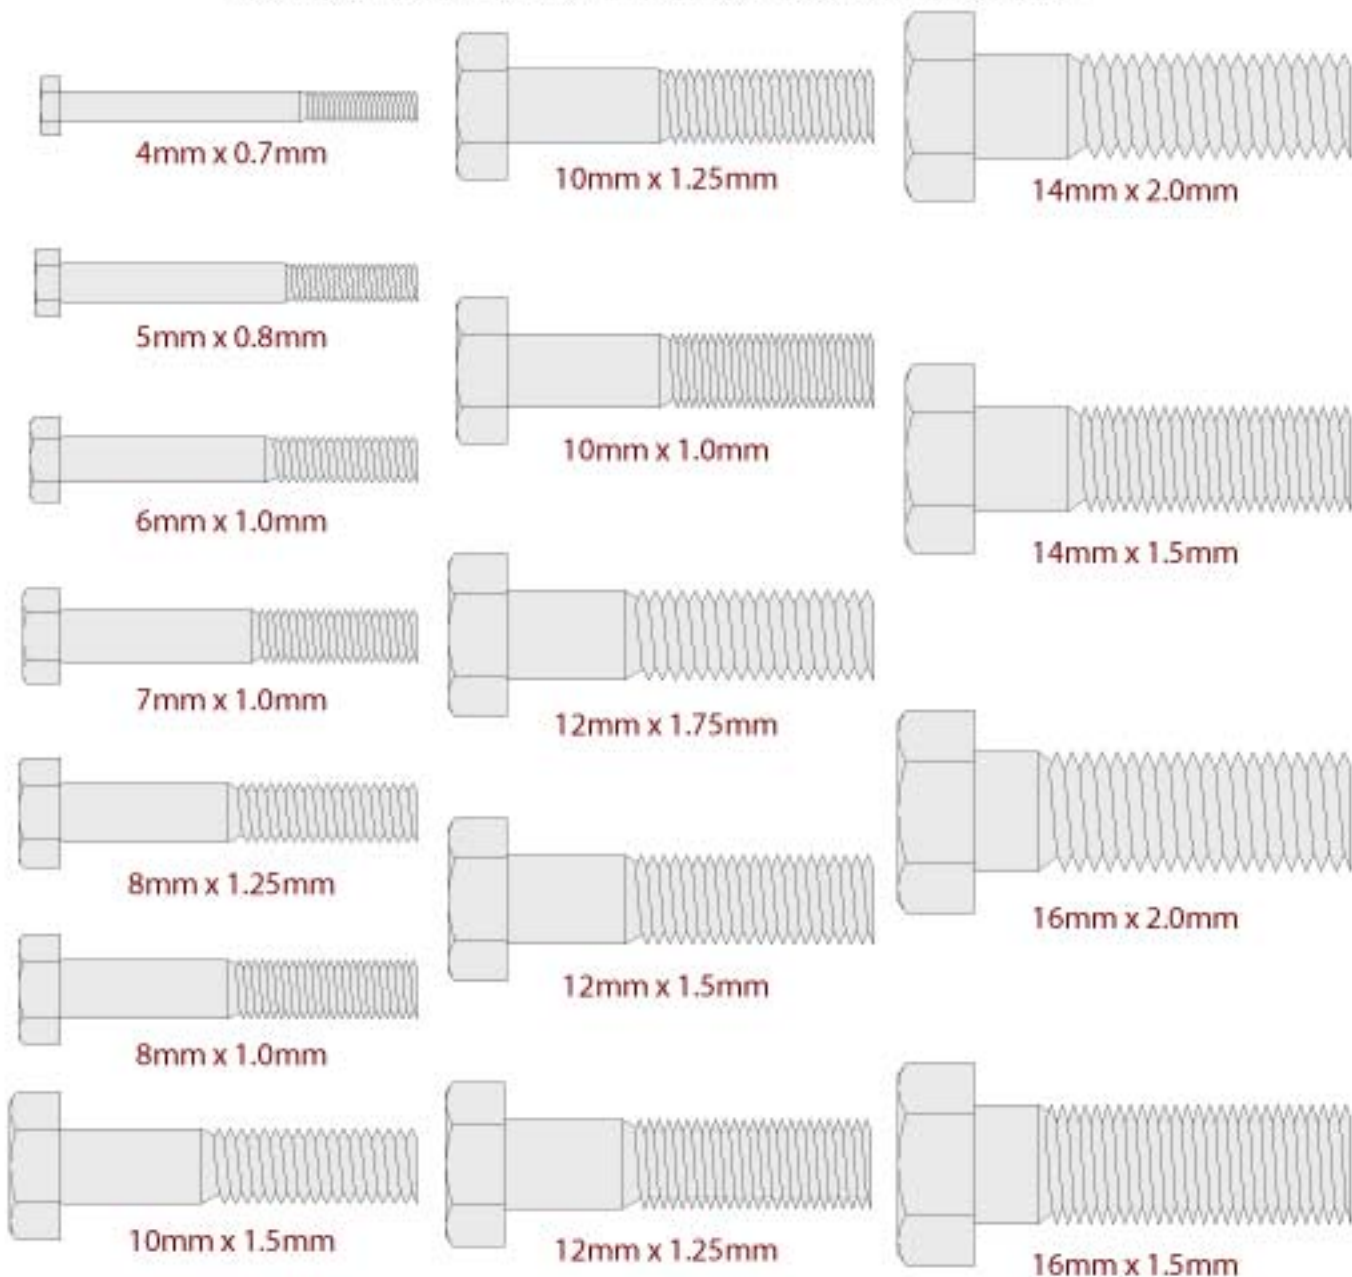

Measure length from under the head to the end of the bolt



Copyright © 2000-2013 Bolt Depot Inc.

IMPORTANT: Make sure to print this chart to **Actual Size** (no scaling).
After printing, measure the scale check below to ensure correct scale. See boltdepot.com/tools for more details.

